

roctracer
4.1.0

Generated by Doxygen 1.8.5

Tue Apr 18 2023 02:44:10

Contents

1	ROC Tracer API Specification	1
1.1	Introduction	1
1.2	Known Limitations and Restrictions	1
2	Todo List	3
3	Module Documentation	5
3.1	Symbol Versions	5
3.1.1	Detailed Description	5
3.1.2	Macro Definition Documentation	5
3.1.2.1	ROCTRACER_VERSION_4_1	5
3.2	Versioning	6
3.2.1	Detailed Description	6
3.2.2	Macro Definition Documentation	6
3.2.2.1	ROCTRACER_VERSION_MAJOR	6
3.2.2.2	ROCTRACER_VERSION_MINOR	6
3.2.3	Function Documentation	6
3.2.3.1	roctracer_version_major	6
3.2.3.2	roctracer_version_minor	7
3.3	Status Codes	8
3.3.1	Detailed Description	8
3.3.2	Enumeration Type Documentation	8
3.3.2.1	roctracer_status_t	8
3.3.3	Function Documentation	9
3.3.3.1	roctracer_error_string	9
3.4	Traced Runtime Domains	10
3.4.1	Detailed Description	10
3.4.2	Typedef Documentation	10
3.4.2.1	roctracer_domain_t	10

3.4.3	Function Documentation	10
3.4.3.1	roctracer_op_code	10
3.4.3.2	roctracer_op_string	11
3.4.3.3	roctracer_set_properties	11
3.5	Callback API	12
3.5.1	Detailed Description	12
3.5.2	Typedef Documentation	12
3.5.2.1	roctracer_rtapi_callback_t	12
3.5.3	Function Documentation	12
3.5.3.1	roctracer_disable_domain_callback	12
3.5.3.2	roctracer_disable_op_callback	13
3.5.3.3	roctracer_enable_domain_callback	13
3.5.3.4	roctracer_enable_op_callback	13
3.6	Activity API	15
3.6.1	Detailed Description	16
3.6.2	Typedef Documentation	16
3.6.2.1	roctracer_allocator_t	16
3.6.2.2	roctracer_buffer_callback_t	16
3.6.2.3	roctracer_pool_t	17
3.6.2.4	roctracer_record_t	17
3.6.3	Function Documentation	17
3.6.3.1	roctracer_close_pool	17
3.6.3.2	roctracer_close_pool_expl	17
3.6.3.3	roctracer_default_pool	17
3.6.3.4	roctracer_default_pool_expl	17
3.6.3.5	roctracer_disable_domain_activity	18
3.6.3.6	roctracer_disable_op_activity	18
3.6.3.7	roctracer_enable_domain_activity	18
3.6.3.8	roctracer_enable_domain_activity_expl	19
3.6.3.9	roctracer_enable_op_activity	20
3.6.3.10	roctracer_enable_op_activity_expl	20
3.6.3.11	roctracer_flush_activity	20
3.6.3.12	roctracer_flush_activity_expl	21
3.6.3.13	roctracer_next_record	21
3.6.3.14	roctracer_open_pool	21
3.6.3.15	roctracer_open_pool_expl	22
3.7	Timestamp Operations	23

3.7.1	Detailed Description	23
3.7.2	Function Documentation	23
3.7.2.1	roctracer_get_timestamp	23
3.8	Initialization and Finalization	24
3.8.1	Detailed Description	24
3.8.2	Function Documentation	24
3.8.2.1	roctracer_plugin_finalize	24
3.8.2.2	roctracer_plugin_initialize	24
3.9	Trace data reporting	25
3.9.1	Detailed Description	25
3.9.2	Function Documentation	25
3.9.2.1	roctracer_plugin_write_activity_records	25
3.9.2.2	roctracer_plugin_write_callback_record	25
4	Data Structure Documentation	27
4.1	roctracer_properties_t Struct Reference	27
4.1.1	Detailed Description	27
4.1.2	Field Documentation	27
4.1.2.1	alloc_arg	27
4.1.2.2	alloc_fun	28
4.1.2.3	buffer_callback_arg	28
4.1.2.4	buffer_callback_fun	28
4.1.2.5	buffer_size	28
4.1.2.6	mode	28
5	File Documentation	29
5.1	/long_pathname_so_that_rpms_can_package_the_debug_info/src/roctracer/inc/roctracer.h File Reference	29
5.1.1	Detailed Description	33
5.1.2	Macro Definition Documentation	33
5.1.2.1	ROCTRACER_API	33
5.1.2.2	ROCTRACER_CALL	33
5.1.2.3	ROCTRACER_EXPORT	33
5.1.2.4	ROCTRACER_IMPORT	33
5.2	/long_pathname_so_that_rpms_can_package_the_debug_info/src/roctracer/inc/roctracer_plugin.h File Reference	33
5.2.1	Detailed Description	34
5.2.2	ROctracer Plugin API	34

Index	35
-----------------------	----

Chapter 1

ROC Tracer API Specification

1.1 Introduction

ROCtracer library, Runtimes Generic Callback/Activity APIs.

The goal of the implementation is to provide a generic independent from specific runtime profiler to trace API and asynchronous activity.

The API provides functionality for registering the runtimes API callbacks and asynchronous activity records pool support.

1.2 Known Limitations and Restrictions

The ROCtracer API library implementation currently has the following restrictions. Future releases aim to address these restrictions.

1. The `ACTIVITY_DOMAIN_HSA_OPS` operations `HSA_OP_ID_DISPATCH`, `HSA_OP_ID_BARRIER`, and `HSA_OP_ID_RESERVED1` are not currently implemented.

Chapter 2

Todo List

Global `roctracer_op_string` (uint32_t domain, uint32_t op, uint32_t kind) ROCTRACER_VERSION_4_1
Define kind.

Chapter 3

Module Documentation

3.1 Symbol Versions

The names used for the shared library versioned symbols.

Macros

- `#define ROCTRACER_VERSION_4_1`

The function was introduced in version 4.1 of the interface and has the symbol version string of "ROCTRACER_4.1".

3.1.1 Detailed Description

The names used for the shared library versioned symbols. Every function is annotated with one of the version macros defined in this section. Each macro specifies a corresponding symbol version string. After dynamically loading the shared library with `dlopen`, the address of each function can be obtained using `dlsym` with the name of the function and its corresponding symbol version string. An error will be reported by `dlsym` if the installed library does not support the version for the function specified in this version of the interface.

3.1.2 Macro Definition Documentation

3.1.2.1 `#define ROCTRACER_VERSION_4_1`

The function was introduced in version 4.1 of the interface and has the symbol version string of "ROCTRACER_4.1".

3.2 Versioning

Version information about the interface and the associated installed library.

Macros

- `#define ROCTRACER_VERSION_MAJOR 4`
The major version of the interface as a macro so it can be used by the preprocessor.
- `#define ROCTRACER_VERSION_MINOR 1`
The minor version of the interface as a macro so it can be used by the preprocessor.

Functions

- `ROCTRACER_API uint32_t roctracer_version_major () ROCTRACER_VERSION_4_1`
Query the major version of the installed library.
- `ROCTRACER_API uint32_t roctracer_version_minor () ROCTRACER_VERSION_4_1`
Query the minor version of the installed library.

3.2.1 Detailed Description

Version information about the interface and the associated installed library. The semantic version of the interface following semver.org rules. A client that uses this interface is only compatible with the installed library if the major version numbers match and the interface minor version number is less than or equal to the installed library minor version number.

3.2.2 Macro Definition Documentation

3.2.2.1 `#define ROCTRACER_VERSION_MAJOR 4`

The major version of the interface as a macro so it can be used by the preprocessor.

3.2.2.2 `#define ROCTRACER_VERSION_MINOR 1`

The minor version of the interface as a macro so it can be used by the preprocessor.

3.2.3 Function Documentation

3.2.3.1 `ROCTRACER_API uint32_t roctracer_version_major ()`

Query the major version of the installed library.

Return the major version of the installed library. This can be used to check if it is compatible with this interface version. This function can be used even when the library is not initialized.

3.2.3.2 ROCTRACER_API uint32_t roctracer_version_minor ()

Query the minor version of the installed library.

Return the minor version of the installed library. This can be used to check if it is compatible with this interface version. This function can be used even when the library is not initialized.

3.3 Status Codes

Most operations return a status code to indicate success or error.

Enumerations

- enum `roctracer_status_t` {
`ROCTRACER_STATUS_SUCCESS` = 0, `ROCTRACER_STATUS_ERROR` = -1, `ROCTRACER_STATUS_ERROR_INVALID_DOMAIN_ID` = -2, `ROCTRACER_STATUS_ERROR_INVALID_ARGUMENT` = -3,
`ROCTRACER_STATUS_ERROR_DEFAULT_POOL_UNDEFINED` = -4, `ROCTRACER_STATUS_ERROR_DEFAULT_POOL_ALREADY_DEFINED` = -5, `ROCTRACER_STATUS_ERROR_MEMORY_ALLOCATION` = -6, `ROCTRACER_STATUS_ERROR_MISMATCHED_EXTERNAL_CORRELATION_ID` = -7,
`ROCTRACER_STATUS_ERROR_NOT_IMPLEMENTED` = -8, `ROCTRACER_STATUS_UNINIT` = 2, `ROCTRACER_STATUS_BREAK` = 3, `ROCTRACER_STATUS_BAD_DOMAIN` = `ROCTRACER_STATUS_ERROR_INVALID_DOMAIN_ID`,
`ROCTRACER_STATUS_BAD_PARAMETER` = `ROCTRACER_STATUS_ERROR_INVALID_ARGUMENT`, `ROCTRACER_STATUS_HIP_API_ERR` = 6, `ROCTRACER_STATUS_HIP_OPS_ERR` = 7, `ROCTRACER_STATUS_HCC_OPS_ERR` = `ROCTRACER_STATUS_HIP_OPS_ERR`,
`ROCTRACER_STATUS_HSA_ERR` = 7, `ROCTRACER_STATUS_ROCTX_ERR` = 8 }

ROC Tracer API status codes.

Functions

- `ROCTRACER_API` const char * `roctracer_error_string()` `ROCTRACER_VERSION_4_1`

Query the textual description of the last error for the current thread.

3.3.1 Detailed Description

Most operations return a status code to indicate success or error.

3.3.2 Enumeration Type Documentation

3.3.2.1 enum roctracer_status_t

ROC Tracer API status codes.

Enumerator

`ROCTRACER_STATUS_SUCCESS` The function has executed successfully.

`ROCTRACER_STATUS_ERROR` A generic error has occurred.

`ROCTRACER_STATUS_ERROR_INVALID_DOMAIN_ID` The domain ID is invalid.

`ROCTRACER_STATUS_ERROR_INVALID_ARGUMENT` An invalid argument was given to the function.

`ROCTRACER_STATUS_ERROR_DEFAULT_POOL_UNDEFINED` No default pool is defined.

`ROCTRACER_STATUS_ERROR_DEFAULT_POOL_ALREADY_DEFINED` The default pool is already defined.

`ROCTRACER_STATUS_ERROR_MEMORY_ALLOCATION` Memory allocation error.

`ROCTRACER_STATUS_ERROR_MISMATCHED_EXTERNAL_CORRELATION_ID` External correlation ID pop mismatch.

ROCTRACER_STATUS_ERROR_NOT_IMPLEMENTED The operation is not currently implemented. This error may be reported by any function. Check the [Known Limitations and Restrictions](#) section to determine the status of the library implementation of the interface.

ROCTRACER_STATUS_UNINIT Deprecated error code.

ROCTRACER_STATUS_BREAK Deprecated error code.

ROCTRACER_STATUS_BAD_DOMAIN Deprecated error code.

ROCTRACER_STATUS_BAD_PARAMETER Deprecated error code.

ROCTRACER_STATUS_HIP_API_ERR Deprecated error code.

ROCTRACER_STATUS_HIP_OPS_ERR Deprecated error code.

ROCTRACER_STATUS_HCC_OPS_ERR Deprecated error code.

ROCTRACER_STATUS_HSA_ERR Deprecated error code.

ROCTRACER_STATUS_ROCTX_ERR Deprecated error code.

3.3.3 Function Documentation

3.3.3.1 ROCTRACER_API const char* roctracer_error_string ()

Query the textual description of the last error for the current thread.

Returns a NUL terminated string describing the error of the last ROC Tracer API call by the calling thread that did not return success. The empty string is returned if there is no previous error. The last error is not cleared.

Returns

Return the error string. The caller owns the returned string and should use `free()` to deallocate it.

3.4 Traced Runtime Domains

The ROC Tracer API can trace multiple runtime libraries.

Typedefs

- typedef activity_domain_t roctracer_domain_t
Enumeration of domains that can be traced.

Functions

- ROCTRACER_API const char * roctracer_op_string (uint32_t domain, uint32_t op, uint32_t kind) ROCTRACER_VERSION_4_1
Query textual name of an operation of a domain.
- ROCTRACER_API roctracer_status_t roctracer_op_code (uint32_t domain, const char *str, uint32_t *op, uint32_t *kind) ROCTRACER_VERSION_4_1
Query the operation code given a domain and the name of an operation.
- ROCTRACER_API roctracer_status_t roctracer_set_properties (roctracer_domain_t domain, void *properties) ROCTRACER_VERSION_4_1
Set the properties of a domain.

3.4.1 Detailed Description

The ROC Tracer API can trace multiple runtime libraries. Each library can have API operations and asynchronous operations that can be traced.

3.4.2 Typedef Documentation

3.4.2.1 typedef activity_domain_t roctracer_domain_t

Enumeration of domains that can be traced.

3.4.3 Function Documentation

3.4.3.1 ROCTRACER_API roctracer_status_t roctracer_op_code (uint32_t domain, const char * str, uint32_t * op, uint32_t * kind)

Query the operation code given a domain and the name of an operation.

Parameters

in	domain	The domain being queried.
in	str	The NUL terminated name of the operation name being queried.
out	op	The operation code.

out	<i>kind</i>	If not NULL then the operation kind code.
-----	-------------	---

Return values

<i>ROCTRACER_STATUS_SUCCESS</i>	The function has been executed successfully. <i>op</i> and <i>kind</i> have been updated.
<i>ROCTRACER_STATUS_ERROR_INVALID_ARGUMENT</i>	The <i>op</i> is invalid for domain.
<i>ROCTRACER_STATUS_ERROR_INVALID_DOMAIN_ID</i>	The domain is invalid or not supported.

3.4.3.2 **ROCTRACER_API** `const char* roctracer_op_string (uint32_t domain, uint32_t op, uint32_t kind)`

Query textual name of an operation of a domain.

Parameters

in	<i>domain</i>	Domain being queried.
in	<i>op</i>	Operation within domain.
in	<i>kind</i> \xrefitem	todo 1.

Returns

Returns the NUL terminated string for the operation name, or NULL if the domain or operation are invalid. The string is owned by the ROC Tracer library.

3.4.3.3 **ROCTRACER_API** `roctracer_status_t roctracer_set_properties (roctracer_domain_t domain, void * properties)`

Set the properties of a domain.

Parameters

in	<i>domain</i>	The domain.
in	<i>properties</i>	The properties. Each domain defines its own type for the properties. Some domains require the properties to be set before they can be enabled.

Return values

<i>ROCTRACER_STATUS_SUCCESS</i>	The function has been executed successfully.
---	--

3.5 Callback API

ROC tracer provides support for runtime API callbacks and activity records logging.

Typedefs

- `typedef activity_rtapi_callback_t roctracer_rtapi_callback_t`
Runtime API callback type.

Functions

- `ROCTRACER_API roctracer_status_t roctracer_enable_op_callback` (activity_domain_t domain, uint32_t op, activity_rtapi_callback_t callback, void *arg) `ROCTRACER_VERSION_4_1`
Enable runtime API callback for a specific operation of a domain.
- `ROCTRACER_API roctracer_status_t roctracer_enable_domain_callback` (activity_domain_t domain, activity_rtapi_callback_t callback, void *arg) `ROCTRACER_VERSION_4_1`
Enable runtime API callback for all operations of a domain.
- `ROCTRACER_API roctracer_status_t roctracer_disable_op_callback` (activity_domain_t domain, uint32_t op) `ROCTRACER_VERSION_4_1`
Disable runtime API callback for a specific operation of a domain.
- `ROCTRACER_API roctracer_status_t roctracer_disable_domain_callback` (activity_domain_t domain) `ROCTRACER_VERSION_4_1`
Disable runtime API callback for all operations of a domain.

3.5.1 Detailed Description

ROC tracer provides support for runtime API callbacks and activity records logging. The API callbacks provide the API calls arguments and are called on different phases, on enter, on exit, on kernel completion.

3.5.2 Typedef Documentation

3.5.2.1 `typedef activity_rtapi_callback_t roctracer_rtapi_callback_t`

Runtime API callback type.

The callback that will be invoked when an enabled runtime API is called. The callback is invoked on entry and on exit.

3.5.3 Function Documentation

3.5.3.1 `ROCTRACER_API roctracer_status_t roctracer_disable_domain_callback (activity_domain_t domain)`

Disable runtime API callback for all operations of a domain.

Parameters

<i>domain</i>	The domain
---------------	------------

Return values

<i>ROCTRACER_STATUS_SUCCESS</i>	The function has been executed successfully.
<i>ROCTRACER_STATUS_ERROR_INVALID_DOMAIN_ID</i>	<i>domain</i> is invalid.

3.5.3.2 **ROCTRACER_API** *rotracer_status_t* *rotracer_disable_op_callback* (*activity_domain_t domain*, *uint32_t op*)

Disable runtime API callback for a specific operation of a domain.

Parameters

<i>domain</i>	The domain
<i>op</i>	The operation in <i>domain</i> .

Return values

<i>ROCTRACER_STATUS_SUCCESS</i>	The function has been executed successfully.
<i>ROCTRACER_STATUS_ERROR_INVALID_DOMAIN_ID</i>	<i>domain</i> is invalid.
<i>ROCTRACER_STATUS_ERROR_INVALID_ARGUMENT</i>	<i>op</i> is invalid for <i>domain</i> .

3.5.3.3 **ROCTRACER_API** *rotracer_status_t* *rotracer_enable_domain_callback* (*activity_domain_t domain*, *activity_rtapi_callback_t callback*, *void * arg*)

Enable runtime API callback for all operations of a domain.

Parameters

<i>domain</i>	The domain
<i>callback</i>	The callback to invoke each time the operation is performed on entry and exit.
<i>arg</i>	Value to pass as last argument of <i>callback</i> .

Return values

<i>ROCTRACER_STATUS_SUCCESS</i>	The function has been executed successfully.
<i>ROCTRACER_STATUS_ERROR_INVALID_DOMAIN_ID</i>	<i>domain</i> is invalid.

3.5.3.4 **ROCTRACER_API** *rotracer_status_t* *rotracer_enable_op_callback* (*activity_domain_t domain*, *uint32_t op*, *activity_rtapi_callback_t callback*, *void * arg*)

Enable runtime API callback for a specific operation of a domain.

Parameters

<i>domain</i>	The domain.
<i>op</i>	The operation ID in <code>domain</code> .
<i>callback</i>	The callback to invoke each time the operation is performed on entry and exit.
<i>arg</i>	Value to pass as last argument of <code>callback</code> .

Return values

<i>ROCTRACER_STATUS_SUCCESS</i>	The function has been executed successfully.
<i>ROCTRACER_STATUS_ERROR_INVALID_DOMAIN_ID</i>	<code>domain</code> is invalid.
<i>ROCTRACER_STATUS_ERROR_INVALID_ARGUMENT</i>	<code>op</code> is invalid for <code>domain</code> .

3.6 Activity API

The activity records are asynchronously logged to the pool and can be associated with the respective API callbacks using the correlation ID.

Data Structures

- struct [roctracer_properties_t](#)
Memory pool properties.

Typedefs

- typedef activity_record_t [roctracer_record_t](#)
Activity record.
- typedef void(* [roctracer_allocator_t](#))(char **ptr, size_t size, void *arg)
Memory pool allocator callback.
- typedef void(* [roctracer_buffer_callback_t](#))(const char *begin, const char *end, void *arg)
Memory pool buffer callback.
- typedef void [roctracer_pool_t](#)
Tracer memory pool type.

Functions

- [ROCTRACER_API roctracer_status_t roctracer_next_record](#) (const activity_record_t *record, const activity_record_t **next) [ROCTRACER_VERSION_4_1](#)
Get a pointer to the next activity record.
- [ROCTRACER_API roctracer_status_t roctracer_open_pool_expl](#) (const [roctracer_properties_t](#) *properties, [roctracer_pool_t](#) **pool) [ROCTRACER_VERSION_4_1](#)
Create tracer memory pool.
- [ROCTRACER_API roctracer_status_t roctracer_open_pool](#) (const [roctracer_properties_t](#) *properties) [ROCTRACER_VERSION_4_1](#)
Create tracer memory pool.
- [ROCTRACER_API roctracer_status_t roctracer_close_pool_expl](#) ([roctracer_pool_t](#) *pool) [ROCTRACER_VERSION_4_1](#)
Close tracer memory pool.
- [ROCTRACER_API roctracer_status_t roctracer_close_pool](#) () [ROCTRACER_VERSION_4_1](#)
Close default tracer memory pool, if defined, and set to undefined.
- [ROCTRACER_API roctracer_pool_t * roctracer_default_pool_expl](#) ([roctracer_pool_t](#) *pool) [ROCTRACER_VERSION_4_1](#)
Query and set the default memory pool.
- [ROCTRACER_API roctracer_pool_t * roctracer_default_pool](#) () [ROCTRACER_VERSION_4_1](#)
Query the current default memory pool.
- [ROCTRACER_API roctracer_status_t roctracer_enable_op_activity_expl](#) (activity_domain_t domain, uint32_t op, [roctracer_pool_t](#) *pool) [ROCTRACER_VERSION_4_1](#)
Enable activity record logging for a specified operation of a domain providing a memory pool.
- [ROCTRACER_API roctracer_status_t roctracer_enable_op_activity](#) (activity_domain_t domain, uint32_t op) [ROCTRACER_VERSION_4_1](#)

Enable activity record logging for a specified operation of a domain using the default memory pool.

- [ROCTRACER_API roctracer_status_t roctracer_enable_domain_activity_expl](#) (activity_domain_t domain, roctracer_pool_t *pool) [ROCTRACER_VERSION_4_1](#)

Enable activity record logging for all operations of a domain providing a memory pool.

- [ROCTRACER_API roctracer_status_t roctracer_enable_domain_activity](#) (activity_domain_t domain) [ROCTRACER_VERSION_4_1](#)

Enable activity record logging for all operations of a domain using the default memory pool.

- [ROCTRACER_API roctracer_status_t roctracer_disable_op_activity](#) (activity_domain_t domain, uint32_t op) [ROCTRACER_VERSION_4_1](#)

Disable activity record logging for a specified operation of a domain.

- [ROCTRACER_API roctracer_status_t roctracer_disable_domain_activity](#) (activity_domain_t domain) [ROCTRACER_VERSION_4_1](#)

Disable activity record logging for all operations of a domain.

- [ROCTRACER_API roctracer_status_t roctracer_flush_activity_expl](#) (roctracer_pool_t *pool) [ROCTRACER_VERSION_4_1](#)

Flush available activity records for a memory pool.

- [ROCTRACER_API roctracer_status_t roctracer_flush_activity](#) () [ROCTRACER_VERSION_4_1](#)

Flush available activity records for the default memory pool.

3.6.1 Detailed Description

The activity records are asynchronously logged to the pool and can be associated with the respective API callbacks using the correlation ID. Activity API can be used to enable collecting of the records with timestamping data for API calls and the kernel submits.

3.6.2 Typedef Documentation

3.6.2.1 typedef void(* roctracer_allocator_t)(char **ptr, size_t size, void *arg)

Memory pool allocator callback.

If `*ptr` is NULL, then allocate memory of `size` bytes and save address in `*ptr`.

If `*ptr` is non-NULL and `size` is non-0, then reallocate the memory at `*ptr` with `size` `size` and save the address in `*ptr`. The memory will have been allocated by the same callback.

If `*ptr` is non-NULL and `size` is 0, then deallocate the memory at `*ptr`. The memory will have been allocated by the same callback.

`size` is the size of the memory allocation or reallocation, or 0 if deallocating.

`arg` Argument provided in the [roctracer_properties_t](#) passed to the [roctracer_open_pool](#) function.

3.6.2.2 typedef void(* roctracer_buffer_callback_t)(const char *begin, const char *end, void *arg)

Memory pool buffer callback.

The callback that will be invoked when a memory pool buffer becomes full or is flushed.

`begin` pointer to first entry entry in the buffer.

`end` pointer to one past the end entry in the buffer.

`arg` the argument specified when the callback was defined.

3.6.2.3 typedef void roctracer_pool_t

Tracer memory pool type.

3.6.2.4 typedef activity_record_t roctracer_record_t

Activity record.

Asynchronous activity events generate activity records.

3.6.3 Function Documentation

3.6.3.1 ROCTRACER_API roctracer_status_t roctracer_close_pool ()

Close default tracer memory pool, if defined, and set to undefined.

All enabled activities that use the pool must have completed writing to the pool, before deleting the pool. Deleting a pool automatically disables any activities that specify the pool, and flushes it.

Return values

<i>ROCTRACER_STATUS_SUCCESS</i>	The function has been executed successfully or there is no default pool.
---	--

3.6.3.2 ROCTRACER_API roctracer_status_t roctracer_close_pool_expl (roctracer_pool_t * pool)

Close tracer memory pool.

All enabled activities that use the pool must have completed writing to the pool, before deleting the pool. Deleting a pool automatically disables any activities that specify the pool, and flushes it.

Parameters

<i>in</i>	<i>pool</i>	Memory pool to close. If NULL, the default memory pool is closed if defined. The default memory pool is set to undefined if closed.
-----------	-------------	---

Return values

<i>ROCTRACER_STATUS_SUCCESS</i>	The function has been executed successfully or pool was NULL and there is no default pool.
---	--

3.6.3.3 ROCTRACER_API roctracer_pool_t* roctracer_default_pool ()

Query the current default memory pool.

Returns

Return the current default memory pool, or NULL if none is defined.

3.6.3.4 ROCTRACER_API roctracer_pool_t* roctracer_default_pool_expl (roctracer_pool_t * pool)

Query and set the default memory pool.

Parameters

<i>in</i>	<i>pool</i>	If not NULL, change the current default pool to <code>pool</code> . If NULL, the default pool is not changed.
-----------	-------------	---

Returns

Return the current default memory pool before any change, or NULL if none is defined.

3.6.3.5 ROCTRACER_API roctracer_status_t roctracer_disable_domain_activity (activity_domain_t domain)

Disable activity record logging for all operations of a domain.

Parameters

<i>in</i>	<i>domain</i>	The domain.
-----------	---------------	-------------

Return values

<i>ROCTRACER_STATUS_SUCCESS</i>	The function has been executed successfully.
---	--

3.6.3.6 ROCTRACER_API roctracer_status_t roctracer_disable_op_activity (activity_domain_t domain, uint32_t op)

Disable activity record logging for a specified operation of a domain.

Parameters

<i>in</i>	<i>domain</i>	The domain.
<i>in</i>	<i>op</i>	The activity operation ID in <code>domain</code> .

Return values

<i>ROCTRACER_STATUS_SUCCESS</i>	The function has been executed successfully.
---	--

3.6.3.7 ROCTRACER_API roctracer_status_t roctracer_enable_domain_activity (activity_domain_t domain)

Enable activity record logging for all operations of a domain using the default memory pool.

Parameters

<i>in</i>	<i>domain</i>	The domain.
-----------	---------------	-------------

Return values

<i>ROCTRACER_STATUS_SUCCESS</i>	The function has been executed successfully.
<i>ROCTRACER_STATUS_ERROR</i>	No default pool is defined.

3.6.3.8 **ROCTRACER_API** `roctracer_status_t roctracer_enable_domain_activity_expl (activity_domain_t domain,
roctracer_pool_t * pool)`

Enable activity record logging for all operations of a domain providing a memory pool.

Parameters

in	<i>domain</i>	The domain.
in	<i>pool</i>	The memory pool to write the activity record. If NULL, use the default memory pool.

Return values

<i>ROCTRACER_STATUS_SUCCESS</i>	The function has been executed successfully.
<i>ROCTRACER_STATUS_ERROR</i>	<i>pool</i> is NULL and no default pool is defined.

3.6.3.9 **ROCTRACER_API** `roctracer_status_t roctracer_enable_op_activity (activity_domain_t domain, uint32_t op)`

Enable activity record logging for a specified operation of a domain using the default memory pool.

Parameters

in	<i>domain</i>	The domain.
in	<i>op</i>	The activity operation ID in <i>domain</i> .

Return values

<i>ROCTRACER_STATUS_SUCCESS</i>	The function has been executed successfully.
<i>ROCTRACER_STATUS_ERROR</i>	No default pool is defined.

3.6.3.10 **ROCTRACER_API** `roctracer_status_t roctracer_enable_op_activity_expl (activity_domain_t domain, uint32_t op, roctracer_pool_t * pool)`

Enable activity record logging for a specified operation of a domain providing a memory pool.

Parameters

in	<i>domain</i>	The domain.
in	<i>op</i>	The activity operation ID in <i>domain</i> .
in	<i>pool</i>	The memory pool to write the activity record. If NULL, use the default memory pool.

Return values

<i>ROCTRACER_STATUS_SUCCESS</i>	The function has been executed successfully.
<i>ROCTRACER_STATUS_ERROR</i>	<i>pool</i> is NULL and no default pool is defined.

3.6.3.11 **ROCTRACER_API** `roctracer_status_t roctracer_flush_activity ()`

Flush available activity records for the default memory pool.

If flushing encounters an activity record still being written, flushing stops. Use a subsequent flush when the record has completed being written to resume the flush.

Return values

<i>ROCTRACER_STATUS_SUCCESS</i>	The function has been executed successfully.
---	--

3.6.3.12 **ROCTRACER_API** `roctracer_status_t roctracer_flush_activity_expl (roctracer_pool_t * pool)`

Flush available activity records for a memory pool.

If flushing encounters an activity record still being written, flushing stops. Use a subsequent flush when the record has completed being written to resume the flush.

Parameters

in	<i>pool</i>	The memory pool to flush. If NULL, flushes the default memory pool.
----	-------------	---

Return values

<i>ROCTRACER_STATUS_SUCCESS</i>	The function has been executed successfully.
---	--

3.6.3.13 **ROCTRACER_API** `roctracer_status_t roctracer_next_record (const activity_record_t * record, const activity_record_t ** next)`

Get a pointer to the next activity record.

A memory pool generates buffers that contain multiple activity records. This function steps to the next activity record.

Parameters

in	<i>record</i>	Pointer to an activity record in a memory pool buffer.
out	<i>next</i>	Pointer to the following activity record in the memory pool buffer.

Return values

<i>ROCTRACER_STATUS_SUCCESS</i>	The function has been executed successfully.
---	--

3.6.3.14 **ROCTRACER_API** `roctracer_status_t roctracer_open_pool (const roctracer_properties_t * properties)`

Create tracer memory pool.

Sets the default memory pool to the created pool if not already defined. Otherwise, return an error.

Parameters

in	<i>properties</i>	Tracer memory pool properties.
----	-------------------	--------------------------------

Return values

<i>ROCTRACER_STATUS_SUCCESS</i>	The function has been executed successfully.
---	--

<code>ROCTRACER_STATUS_ERROR_DEFAULT_POOL_ALREADY_DEFINED</code>	The default pool is already defined. Unable to create the pool.
<code>ROCTRACER_STATUS_ERROR_MEMORY_ALLOCATION</code>	Unable to allocate memory for the <code>pool</code> . Unable to create the pool.

3.6.3.15 **ROCTRACER_API** `roctracer_status_t` `roctracer_open_pool_expl` (`const roctracer_properties_t * properties`, `roctracer_pool_t ** pool`)

Create tracer memory pool.

If `pool` is not NULL, returns the created memory pool. Does not change the default memory pool.

If `pool` is NULL, sets the default memory pool to the created pool if not already defined. Otherwise, return an error.

Parameters

in	<code>properties</code>	Tracer memory pool properties.
out	<code>pool</code>	Tracer memory pool created if not NULL.

Return values

<code>ROCTRACER_STATUS_SUCCESS</code>	The function has been executed successfully.
<code>ROCTRACER_STATUS_ERROR_DEFAULT_POOL_ALREADY_DEFINED</code>	<code>pool</code> is NULL and the default pool is already defined. Unable to create the pool.
<code>ROCTRACER_STATUS_ERROR_MEMORY_ALLOCATION</code>	Unable to allocate memory for the <code>pool</code> . Unable to create the pool.

3.7 Timestamp Operations

Functions

- [ROCTRACER_API roctracer_status_t roctracer_get_timestamp \(roctracer_timestamp_t *timestamp\)](#) [ROCTRACER_VERSION_4_1](#)

Get the system clock timestamp.

3.7.1 Detailed Description

3.7.2 Function Documentation

3.7.2.1 [ROCTRACER_API roctracer_status_t roctracer_get_timestamp \(roctracer_timestamp_t * timestamp \)](#)

Get the system clock timestamp.

Parameters

<code>out</code>	<code>timestamp</code>	The system clock timestamp in nano seconds.
------------------	------------------------	---

Return values

ROCTRACER_STATUS_SUCCESS	The function has been executed successfully.
--	--

3.8 Initialization and Finalization

The ROTracer Plugin API must be initialized before using any of the operations to report trace data, and finalized after the last trace data has been reported.

Functions

- **ROTRACER_EXPORT** int `roctracer_plugin_initialize` (uint32_t `roctracer_major_version`, uint32_t `roctracer_minor_version`)
Initialize plugin.
- **ROTRACER_EXPORT** void `roctracer_plugin_finalize` ()
Finalize plugin.

3.8.1 Detailed Description

The ROTracer Plugin API must be initialized before using any of the operations to report trace data, and finalized after the last trace data has been reported.

3.8.2 Function Documentation

3.8.2.1 **ROTRACER_EXPORT** void `roctracer_plugin_finalize` ()

Finalize plugin.

This must be called after `roctracer_plugin_initialize` and after all trace data has been reported by `roctracer_plugin_write_callback_record` and `roctracer_plugin_write_activity_records`.

3.8.2.2 **ROTRACER_EXPORT** int `roctracer_plugin_initialize` (uint32_t `roctracer_major_version`, uint32_t `roctracer_minor_version`)

Initialize plugin.

Must be called before any other operation.

Parameters

in	<code>roctracer_major_version</code>	The major version of the ROTracer API being used by the ROTracer Tool. An error is reported if this does not match the major version of the ROTracer API used to build the plugin library. This ensures compatibility of the trace data format.
in	<code>roctracer_minor_version</code>	The minor version of the ROTracer API being used by the ROTracer Tool. An error is reported if the <code>roctracer_major_version</code> matches and this is greater than the minor version of the ROTracer API used to build the plugin library. This ensures compatibility of the trace data format.

Returns

Returns 0 on success and -1 on error.

3.9 Trace data reporting

Operations to output trace data.

Functions

- **ROCTRACER_EXPORT** int `roctracer_plugin_write_callback_record` (const `roctracer_record_t` *record, const void *callback_data)
Report a single callback trace data.
- **ROCTRACER_EXPORT** int `roctracer_plugin_write_activity_records` (const `roctracer_record_t` *begin, const `roctracer_record_t` *end)
Report a range of activity trace data.

3.9.1 Detailed Description

Operations to output trace data.

3.9.2 Function Documentation

3.9.2.1 **ROCTRACER_EXPORT** int `roctracer_plugin_write_activity_records` (const `roctracer_record_t` * *begin*, const `roctracer_record_t` * *end*)

Report a range of activity trace data.

Reports a range of primarily domain independent trace data. The range is specified by a pointer to the first record and a pointer to one past the last record. `roctracer_next_record` is used to iterate the range in forward order.

Parameters

in	<i>begin</i>	Pointer to the first record.
in	<i>end</i>	Pointer to one past the last record.

Returns

Returns 0 on success and -1 on error.

3.9.2.2 **ROCTRACER_EXPORT** int `roctracer_plugin_write_callback_record` (const `roctracer_record_t` * *record*, const void * *callback_data*)

Report a single callback trace data.

Parameters

in	<i>record</i>	Primarily domain independent trace data.
in	<i>callback_data</i>	Domain specific trace data. The type of this argument depends on the values of <code>record.domain</code> .

Returns

Returns 0 on success and -1 on error.

Chapter 4

Data Structure Documentation

4.1 roctracer_properties_t Struct Reference

Memory pool properties.

```
#include <roctracer.h>
```

Data Fields

- `uint32_t mode`
ROC Tracer mode.
- `size_t buffer_size`
Size of buffer in bytes.
- `roctracer_allocator_t alloc_fun`
The allocator function to use to allocate and deallocate the buffer.
- `void * alloc_arg`
The argument to pass when invoking the `alloc_fun` allocator.
- `roctracer_buffer_callback_t buffer_callback_fun`
The function to call when a buffer becomes full or is flushed.
- `void * buffer_callback_arg`
The argument to pass when invoking the `buffer_callback_fun` callback.

4.1.1 Detailed Description

Memory pool properties.

Defines the properties when a tracer memory pool is created.

4.1.2 Field Documentation

4.1.2.1 `void* roctracer_properties_t::alloc_arg`

The argument to pass when invoking the `alloc_fun` allocator.

4.1.2.2 `roctracer_allocator_t roctracer_properties_t::alloc_fun`

The allocator function to use to allocate and deallocate the buffer.

If NULL then `malloc`, `realloc`, and `free` are used.

4.1.2.3 `void* roctracer_properties_t::buffer_callback_arg`

The argument to pass when invoking the `buffer_callback_fun` callback.

4.1.2.4 `roctracer_buffer_callback_t roctracer_properties_t::buffer_callback_fun`

The function to call when a buffer becomes full or is flushed.

4.1.2.5 `size_t roctracer_properties_t::buffer_size`

Size of buffer in bytes.

4.1.2.6 `uint32_t roctracer_properties_t::mode`

ROC Tracer mode.

The documentation for this struct was generated from the following file:

- `/long_pathname_so_that_rpms_can_package_the_debug_info/src/roctracer/inc/roctracer.h`

Chapter 5


File Documentation

5.1 /long_pathname_so_that_rpms_can_package_the_debug_info/src/roctracer/inc/roctracer.h File Reference


ROCracer API interface.

```
#include <stddef.h>
#include <stdint.h>
#include "ext/prof_protocol.h"
```

Include dependency graph for roctracer.h:

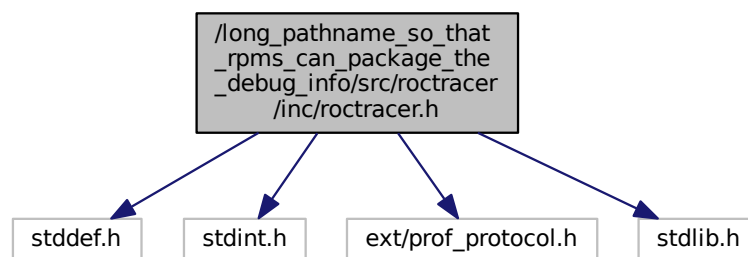

This graph shows which files directly or indirectly include this file:

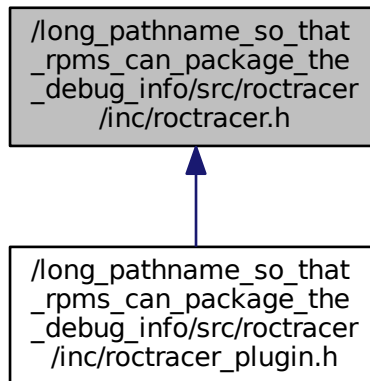

Data Structures

- struct [rotracer_properties_t](#)
Memory pool properties.

Macros

- #define [ROCTRACER_CALL](#)
- #define [ROCTRACER_EXPORT](#) [ROCTRACER_EXPORT_DECORATOR](#) [ROCTRACER_CALL](#)
- #define [ROCTRACER_IMPORT](#) [ROCTRACER_IMPORT_DECORATOR](#) [ROCTRACER_CALL](#)
- #define [ROCTRACER_API](#) [ROCTRACER_IMPORT](#)
- #define [ROCTRACER_VERSION_4_1](#)
The function was introduced in version 4.1 of the interface and has the symbol version string of "ROCTRACER_4.1".
- #define [ROCTRACER_VERSION_MAJOR](#) 4
The major version of the interface as a macro so it can be used by the preprocessor.
- #define [ROCTRACER_VERSION_MINOR](#) 1
The minor version of the interface as a macro so it can be used by the preprocessor.

Typedefs

- typedef activity_domain_t [rotracer_domain_t](#)
Enumeration of domains that can be traced.
- typedef activity_rtapi_callback_t [rotracer_rtapi_callback_t](#)
Runtime API callback type.
- typedef activity_record_t [rotracer_record_t](#)
Activity record.
- typedef void(* [rotracer_allocator_t](#))(char **ptr, size_t size, void *arg)

Memory pool allocator callback.

- typedef void(* [roctracer_buffer_callback_t](#))(const char *begin, const char *end, void *arg)

Memory pool buffer callback.

- typedef void [roctracer_pool_t](#)

Tracer memory pool type.

Enumerations

- enum [roctracer_status_t](#) {
[ROCTRACER_STATUS_SUCCESS](#) = 0, [ROCTRACER_STATUS_ERROR](#) = -1, [ROCTRACER_STATUS_ERROR_INVALID_DOMAIN_ID](#) = -2, [ROCTRACER_STATUS_ERROR_INVALID_ARGUMENT](#) = -3,
[ROCTRACER_STATUS_ERROR_DEFAULT_POOL_UNDEFINED](#) = -4, [ROCTRACER_STATUS_ERROR_DEFAULT_POOL_ALREADY_DEFINED](#) = -5, [ROCTRACER_STATUS_ERROR_MEMORY_ALLOCATION](#) = -6, [ROCTRACER_STATUS_ERROR_MISMATCHED_EXTERNAL_CORRELATION_ID](#) = -7,
[ROCTRACER_STATUS_ERROR_NOT_IMPLEMENTED](#) = -8, [ROCTRACER_STATUS_UNINIT](#) = 2, [ROCTRACER_STATUS_BREAK](#) = 3, [ROCTRACER_STATUS_BAD_DOMAIN](#) = [ROCTRACER_STATUS_ERROR_INVALID_DOMAIN_ID](#),
[ROCTRACER_STATUS_BAD_PARAMETER](#) = [ROCTRACER_STATUS_ERROR_INVALID_ARGUMENT](#), [ROCTRACER_STATUS_HIP_API_ERR](#) = 6, [ROCTRACER_STATUS_HIP_OPS_ERR](#) = 7, [ROCTRACER_STATUS_HCC_OPS_ERR](#) = [ROCTRACER_STATUS_HIP_OPS_ERR](#),
[ROCTRACER_STATUS_HSA_ERR](#) = 7, [ROCTRACER_STATUS_ROCTX_ERR](#) = 8 }
ROC Tracer API status codes.

Functions

- [ROCTRACER_API](#) uint32_t [roctracer_version_major](#) () [ROCTRACER_VERSION_4_1](#)
Query the major version of the installed library.
- [ROCTRACER_API](#) uint32_t [roctracer_version_minor](#) () [ROCTRACER_VERSION_4_1](#)
Query the minor version of the installed library.
- [ROCTRACER_API](#) const char * [roctracer_error_string](#) () [ROCTRACER_VERSION_4_1](#)
Query the textual description of the last error for the current thread.
- [ROCTRACER_API](#) const char * [roctracer_op_string](#) (uint32_t domain, uint32_t op, uint32_t kind) [ROCTRACER_VERSION_4_1](#)
Query textual name of an operation of a domain.
- [ROCTRACER_API](#) [roctracer_status_t](#) [roctracer_op_code](#) (uint32_t domain, const char *str, uint32_t *op, uint32_t *kind) [ROCTRACER_VERSION_4_1](#)
Query the operation code given a domain and the name of an operation.
- [ROCTRACER_API](#) [roctracer_status_t](#) [roctracer_set_properties](#) ([roctracer_domain_t](#) domain, void *properties) [ROCTRACER_VERSION_4_1](#)
Set the properties of a domain.
- [ROCTRACER_API](#) [roctracer_status_t](#) [roctracer_enable_op_callback](#) ([activity_domain_t](#) domain, uint32_t op, [activity_rtapi_callback_t](#) callback, void *arg) [ROCTRACER_VERSION_4_1](#)
Enable runtime API callback for a specific operation of a domain.
- [ROCTRACER_API](#) [roctracer_status_t](#) [roctracer_enable_domain_callback](#) ([activity_domain_t](#) domain, [activity_rtapi_callback_t](#) callback, void *arg) [ROCTRACER_VERSION_4_1](#)
Enable runtime API callback for all operations of a domain.
- [ROCTRACER_API](#) [roctracer_status_t](#) [roctracer_disable_op_callback](#) ([activity_domain_t](#) domain, uint32_t op) [ROCTRACER_VERSION_4_1](#)
Disable runtime API callback for a specific operation of a domain.

- [ROCTRACER_API roctracer_status_t roctracer_disable_domain_callback](#) (activity_domain_t domain) [ROCTRACER_VERSION_4_1](#)
Disable runtime API callback for all operations of a domain.
- [ROCTRACER_API roctracer_status_t roctracer_next_record](#) (const activity_record_t *record, const activity_record_t **next) [ROCTRACER_VERSION_4_1](#)
Get a pointer to the next activity record.
- [ROCTRACER_API roctracer_status_t roctracer_open_pool_expl](#) (const roctracer_properties_t *properties, roctracer_pool_t **pool) [ROCTRACER_VERSION_4_1](#)
Create tracer memory pool.
- [ROCTRACER_API roctracer_status_t roctracer_open_pool](#) (const roctracer_properties_t *properties) [ROCTRACER_VERSION_4_1](#)
Create tracer memory pool.
- [ROCTRACER_API roctracer_status_t roctracer_close_pool_expl](#) (roctracer_pool_t *pool) [ROCTRACER_VERSION_4_1](#)
Close tracer memory pool.
- [ROCTRACER_API roctracer_status_t roctracer_close_pool](#) () [ROCTRACER_VERSION_4_1](#)
Close default tracer memory pool, if defined, and set to undefined.
- [ROCTRACER_API roctracer_pool_t * roctracer_default_pool_expl](#) (roctracer_pool_t *pool) [ROCTRACER_VERSION_4_1](#)
Query and set the default memory pool.
- [ROCTRACER_API roctracer_pool_t * roctracer_default_pool](#) () [ROCTRACER_VERSION_4_1](#)
Query the current default memory pool.
- [ROCTRACER_API roctracer_status_t roctracer_enable_op_activity_expl](#) (activity_domain_t domain, uint32_t op, roctracer_pool_t *pool) [ROCTRACER_VERSION_4_1](#)
Enable activity record logging for a specified operation of a domain providing a memory pool.
- [ROCTRACER_API roctracer_status_t roctracer_enable_op_activity](#) (activity_domain_t domain, uint32_t op) [ROCTRACER_VERSION_4_1](#)
Enable activity record logging for a specified operation of a domain using the default memory pool.
- [ROCTRACER_API roctracer_status_t roctracer_enable_domain_activity_expl](#) (activity_domain_t domain, roctracer_pool_t *pool) [ROCTRACER_VERSION_4_1](#)
Enable activity record logging for all operations of a domain providing a memory pool.
- [ROCTRACER_API roctracer_status_t roctracer_enable_domain_activity](#) (activity_domain_t domain) [ROCTRACER_VERSION_4_1](#)
Enable activity record logging for all operations of a domain using the default memory pool.
- [ROCTRACER_API roctracer_status_t roctracer_disable_op_activity](#) (activity_domain_t domain, uint32_t op) [ROCTRACER_VERSION_4_1](#)
Disable activity record logging for a specified operation of a domain.
- [ROCTRACER_API roctracer_status_t roctracer_disable_domain_activity](#) (activity_domain_t domain) [ROCTRACER_VERSION_4_1](#)
Disable activity record logging for all operations of a domain.
- [ROCTRACER_API roctracer_status_t roctracer_flush_activity_expl](#) (roctracer_pool_t *pool) [ROCTRACER_VERSION_4_1](#)
Flush available activity records for a memory pool.
- [ROCTRACER_API roctracer_status_t roctracer_flush_activity](#) () [ROCTRACER_VERSION_4_1](#)
Flush available activity records for the default memory pool.
- [ROCTRACER_API roctracer_status_t roctracer_get_timestamp](#) (roctracer_timestamp_t *timestamp) [ROCTRACER_VERSION_4_1](#)
Get the system clock timestamp.

5.1.1 Detailed Description

ROCracer API interface.

5.1.2 Macro Definition Documentation

5.1.2.1 `#define ROCTRACER_API ROCTRACER_IMPORT`

5.1.2.2 `#define ROCTRACER_CALL`

5.1.2.3 `#define ROCTRACER_EXPORT ROCTRACER_EXPORT_DECORATOR ROCTRACER_CALL`

5.1.2.4 `#define ROCTRACER_IMPORT ROCTRACER_IMPORT_DECORATOR ROCTRACER_CALL`


5.2 /long_pathname_so_that_rpms_can_package_the_debug_info/src/roctracer/inc/roctracer_plugin.h File Reference

ROCracer Tool Plugin API interface.

```
#include "roctracer.h"
```

```
#include <stdint.h>
```

Include dependency graph for roctracer_plugin.h:

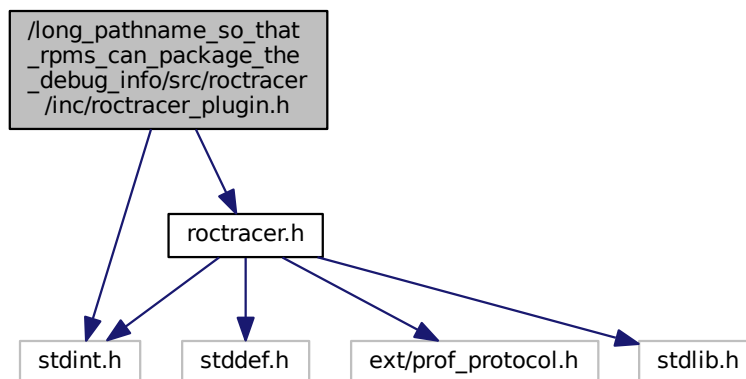

Functions

- `ROCTRACER_EXPORT int roctracer_plugin_initialize (uint32_t roctracer_major_version, uint32_t roctracer_minor_version)`
Initialize plugin.
- `ROCTRACER_EXPORT void roctracer_plugin_finalize ()`
Finalize plugin.

- `ROCTRACER_EXPORT int roctracer_plugin_write_callback_record (const roctracer_record_t *record, const void *callback_data)`
Report a single callback trace data.
- `ROCTRACER_EXPORT int roctracer_plugin_write_activity_records (const roctracer_record_t *begin, const roctracer_record_t *end)`
Report a range of activity trace data.

5.2.1 Detailed Description

ROTracer Tool Plugin API interface.

5.2.2 ROTracer Plugin API

The ROTracer Plugin API is used by the ROTracer Tool to output all tracing information. Different implementations of the ROTracer Plugin API can be developed that output the tracing data in different formats. The ROTracer Tool can be configured to load a specific library that supports the user desired format.

The API is not thread safe. It is the responsibility of the ROTracer Tool to ensure the operations are synchronized and not called concurrently. There is no requirement for the ROTracer Tool to report trace data in any specific order. If the format supported by plugin requires specific ordering, it is the responsibility of the plugin implementation to perform any necessary sorting.

Index

Activity API, [15](#)

- [roctracer_allocator_t](#), [16](#)
- [roctracer_buffer_callback_t](#), [16](#)
- [roctracer_close_pool](#), [17](#)
- [roctracer_close_pool_expl](#), [17](#)
- [roctracer_default_pool](#), [17](#)
- [roctracer_default_pool_expl](#), [17](#)
- [roctracer_disable_domain_activity](#), [18](#)
- [roctracer_disable_op_activity](#), [18](#)
- [roctracer_enable_domain_activity](#), [18](#)
- [roctracer_enable_domain_activity_expl](#), [18](#)
- [roctracer_enable_op_activity](#), [20](#)
- [roctracer_enable_op_activity_expl](#), [20](#)
- [roctracer_flush_activity](#), [20](#)
- [roctracer_flush_activity_expl](#), [21](#)
- [roctracer_next_record](#), [21](#)
- [roctracer_open_pool](#), [21](#)
- [roctracer_open_pool_expl](#), [22](#)
- [roctracer_pool_t](#), [16](#)
- [roctracer_record_t](#), [17](#)

alloc_arg

- [roctracer_properties_t](#), [27](#)

alloc_fun

- [roctracer_properties_t](#), [27](#)

buffer_callback_arg

- [roctracer_properties_t](#), [28](#)

buffer_callback_fun

- [roctracer_properties_t](#), [28](#)

buffer_size

- [roctracer_properties_t](#), [28](#)

Callback API, [12](#)

- [roctracer_disable_domain_callback](#), [12](#)
- [roctracer_disable_op_callback](#), [13](#)
- [roctracer_enable_domain_callback](#), [13](#)
- [roctracer_enable_op_callback](#), [13](#)
- [roctracer_rtapi_callback_t](#), [12](#)

Initialization and Finalization, [24](#)

- [roctracer_plugin_finalize](#), [24](#)
- [roctracer_plugin_initialize](#), [24](#)

mode

- [roctracer_properties_t](#), [28](#)

ROCTRACER_STATUS_BAD_DOMAIN

- Status Codes, [9](#)

ROCTRACER_STATUS_BAD_PARAMETER

- Status Codes, [9](#)

ROCTRACER_STATUS_BREAK

- Status Codes, [9](#)

ROCTRACER_STATUS_ERROR

- Status Codes, [8](#)

ROCTRACER_STATUS_ERROR_DEFAULT_POOL_ALREADY_DEFINED

- Status Codes, [8](#)

ROCTRACER_STATUS_ERROR_DEFAULT_POOL_UNDEFINED

- Status Codes, [8](#)

ROCTRACER_STATUS_ERROR_INVALID_ARGUMENT

- Status Codes, [8](#)

ROCTRACER_STATUS_ERROR_INVALID_DOMAIN_ID

- Status Codes, [8](#)

ROCTRACER_STATUS_ERROR_MEMORY_ALLOCATION

- Status Codes, [8](#)

ROCTRACER_STATUS_ERROR_MISMATCHED_EXTERNAL_CORRELATION_ID

- Status Codes, [8](#)

ROCTRACER_STATUS_ERROR_NOT_IMPLEMENTED

- Status Codes, [8](#)

ROCTRACER_STATUS_HCC_OPS_ERR

- Status Codes, [9](#)

ROCTRACER_STATUS_HIP_API_ERR

- Status Codes, [9](#)

ROCTRACER_STATUS_HIP_OPS_ERR

- Status Codes, [9](#)

ROCTRACER_STATUS_HSA_ERR

- Status Codes, [9](#)

ROCTRACER_STATUS_ROCTX_ERR

- Status Codes, [9](#)

ROCTRACER_STATUS_SUCCESS

- Status Codes, [8](#)

ROCTRACER_STATUS_UNINIT

- Status Codes, [9](#)

ROCTRACER_API

- [roctracer.h](#), [33](#)

ROCTRACER_CALL

- [roctracer.h](#), [33](#)

ROCTRACER_EXPORT

- roctracer.h, [33](#)
- ROCTRACER_IMPORT
 - roctracer.h, [33](#)
- ROCTRACER_VERSION_4_1
 - Symbol Versions, [5](#)
- roctracer.h
 - ROCTRACER_API, [33](#)
 - ROCTRACER_CALL, [33](#)
 - ROCTRACER_EXPORT, [33](#)
 - ROCTRACER_IMPORT, [33](#)
- roctracer_allocator_t
 - Activity API, [16](#)
- roctracer_buffer_callback_t
 - Activity API, [16](#)
- roctracer_close_pool
 - Activity API, [17](#)
- roctracer_close_pool_expl
 - Activity API, [17](#)
- roctracer_default_pool
 - Activity API, [17](#)
- roctracer_default_pool_expl
 - Activity API, [17](#)
- roctracer_disable_domain_activity
 - Activity API, [18](#)
- roctracer_disable_domain_callback
 - Callback API, [12](#)
- roctracer_disable_op_activity
 - Activity API, [18](#)
- roctracer_disable_op_callback
 - Callback API, [13](#)
- roctracer_domain_t
 - Traced Runtime Domains, [10](#)
- roctracer_enable_domain_activity
 - Activity API, [18](#)
- roctracer_enable_domain_activity_expl
 - Activity API, [18](#)
- roctracer_enable_domain_callback
 - Callback API, [13](#)
- roctracer_enable_op_activity
 - Activity API, [20](#)
- roctracer_enable_op_activity_expl
 - Activity API, [20](#)
- roctracer_enable_op_callback
 - Callback API, [13](#)
- roctracer_error_string
 - Status Codes, [9](#)
- roctracer_flush_activity
 - Activity API, [20](#)
- roctracer_flush_activity_expl
 - Activity API, [21](#)
- roctracer_get_timestamp
 - Timestamp Operations, [23](#)
- roctracer_next_record
 - Activity API, [21](#)

- roctracer_op_code
 - Traced Runtime Domains, [10](#)
- roctracer_op_string
 - Traced Runtime Domains, [11](#)
- roctracer_open_pool
 - Activity API, [21](#)
- roctracer_open_pool_expl
 - Activity API, [22](#)
- roctracer_plugin_finalize
 - Initialization and Finalization, [24](#)
- roctracer_plugin_initialize
 - Initialization and Finalization, [24](#)
- roctracer_plugin_write_activity_records
 - Trace data reporting, [25](#)
- roctracer_plugin_write_callback_record
 - Trace data reporting, [25](#)
- roctracer_pool_t
 - Activity API, [16](#)
- roctracer_properties_t, [27](#)
 - alloc_arg, [27](#)
 - alloc_fun, [27](#)
 - buffer_callback_arg, [28](#)
 - buffer_callback_fun, [28](#)
 - buffer_size, [28](#)
 - mode, [28](#)
- roctracer_record_t
 - Activity API, [17](#)
- roctracer_rtapi_callback_t
 - Callback API, [12](#)
- roctracer_set_properties
 - Traced Runtime Domains, [11](#)
- roctracer_status_t
 - Status Codes, [8](#)
- roctracer_version_major
 - Versioning, [6](#)
- roctracer_version_minor
 - Versioning, [6](#)
- Status Codes, [8](#)
 - ROCTRACER_STATUS_BAD_DOMAIN, [9](#)
 - ROCTRACER_STATUS_BAD_PARAMETER, [9](#)
 - ROCTRACER_STATUS_BREAK, [9](#)
 - ROCTRACER_STATUS_ERROR, [8](#)
 - ROCTRACER_STATUS_ERROR_DEFAULT_POOL_ALREADY_DEFINED, [8](#)
 - ROCTRACER_STATUS_ERROR_DEFAULT_POOL_UNDEFINED, [8](#)
 - ROCTRACER_STATUS_ERROR_INVALID_ARGUMENT, [8](#)
 - ROCTRACER_STATUS_ERROR_INVALID_DOMAIN_ID, [8](#)
 - ROCTRACER_STATUS_ERROR_MEMORY_ALLOCATION, [8](#)

- ROCTRACER_STATUS_ERROR_MISMATCHED_-
EXTERNAL_CORRELATION_ID, [8](#)
- ROCTRACER_STATUS_ERROR_NOT_IMPLEMENTED, [8](#)
- ROCTRACER_STATUS_HCC_OPS_ERR, [9](#)
- ROCTRACER_STATUS_HIP_API_ERR, [9](#)
- ROCTRACER_STATUS_HIP_OPS_ERR, [9](#)
- ROCTRACER_STATUS_HSA_ERR, [9](#)
- ROCTRACER_STATUS_ROCTX_ERR, [9](#)
- ROCTRACER_STATUS_SUCCESS, [8](#)
- ROCTRACER_STATUS_UNINIT, [9](#)
- roctracer_error_string, [9](#)
- roctracer_status_t, [8](#)
- Symbol Versions, [5](#)
 - ROCTRACER_VERSION_4_1, [5](#)
- Timestamp Operations, [23](#)
 - roctracer_get_timestamp, [23](#)
- Trace data reporting, [25](#)
 - roctracer_plugin_write_activity_records, [25](#)
 - roctracer_plugin_write_callback_record, [25](#)
- Traced Runtime Domains, [10](#)
 - roctracer_domain_t, [10](#)
 - roctracer_op_code, [10](#)
 - roctracer_op_string, [11](#)
 - roctracer_set_properties, [11](#)
- Versioning, [6](#)
 - roctracer_version_major, [6](#)
 - roctracer_version_minor, [6](#)